

Intelligent Sanitary Ware





The instructions in this manual are for August 2019. For product compatibility information released after this date, please contact local agents for the latest version of the instructions and technical support.

SINCE2002

Massaging Bathtub(GA-1580N)

ISO9001 TÜV (PICC

Manual

Intelligent Sanitary Wares Manual

Dear user,

Thank you for your choosing our series of computerized whirlpools, which are controlled by modern full function computer and using beautiful bronze metal parts. It sources from personality and unique for people.

Please read carefully this consumer manual before installation and operation to ensure that you can use this product safely.

⚠ Warning:

- 1. The electrical installation of this product must be made by qualified electrician.
- 2. The local electrical parameters must be accord with electric parameters of this product.
- 3. This product must be grounded properly and test it.
- 4. There is no parts of the computer control which can be repaired by user themselves, do not unpack the computer control yourselves if the electrical parts of this product do not work. You should inform the dealer to check and repair it. Our Company would not be liable for the electrical parts otherwise user unpack the computer control themselves.

Troubleshooting

Symptoms	Problem Causes	Recommended Action			
Indicating light on control panel doesn't work and whirlpool doesn't work	Electrical power box disconnects to control box 5V voltage on circuit board is not available	①、Connect the electrical power box to control box ②、Repair 5V voltage			
No signal display on LCD and indicating light doesn't work	 Electrical power disconnects, no power to control box 4A fuse of electrical power box is burn-out 	①、Turn on electrical power ②、Replace bulb			
Whirlpools bottom lamp is not available	 Bulb cord disconnects bulb is not available No power to bulb 	 Conenct the wiring again Replace bulb Bulb overruns,it runs from 20W to 25W 			
Hydro function is not available	Medical bath generator doesn't work Pipe of medical bath generator is blocked Medical bath generator disconnects	 Replace medical bath generator Remove obstruction from pipe Connect the wiring again 			
Medical bath in not available	Water doesn't reach high water level detector Water level detector doesn't work Pump doesn't work Electronagnetic valve of air outlet doesn't work Air pipe is blocked	 Wait for water reaching high water level detector Check and repair high water level detector Replace pump Check and repair electromagnetic valve of air outlet Renove obstruction from pipe 			
Sterilization function is not available	①、Sterilization device disconnects ②、Sterilization device doesn't work	①、Connect wiring again ②、Replace sterilization device			
Remote control doesn't work	①、Capacity of battery is too low ②、Battery installs in wrong direction ③、Kemote control is not available	Replace battery Install battery properly according to prompt Replace remote control			
Heating device failed	 Water doesn't reach high water level detector Water pump doesn't turn on Heating protector broken Heating bar broken 	 Wait for water reaching high water level detector Turn on the water pump Replace heating protector Replace heating bar 			

Notice: ①. Call dealer or qualified electrician for maintenance when meeting problems.

② Must not replace, put on or take off the electrical parts when checking problems by user themselves.

Maintenance

- 1. Keep the acryl surface of the shower panel from crashing by a sharp edge. If the surface is crashed or there is some blot which can not be removed by scrub, using #1500 sand paper to polish it and apply some toothpaste on a soft cloth to wipe it.
- 2. Using special cleanser to clean-up the shower panel. The cleanser contain no such organic solvents as acid, alkali, ketone and aldehyde.
- 3. Need not polish the plating parts of the shower panel to prevent from affecting the brightness of the surface. Keep benzine and acid (such as sealant) away from the plating parts avoid eroding when being in installation.
- 4. Shut down the water and electrical supply if the shower panel is not in operation for a long time. Keep it in a dry and ventilated circumstance and far away from volatile chemicals.
- 5. Clean-up the filter at the joint of the water pipe to ensure the fluent flowing.

Contents


Contents · · · · · · · · · · · · · · · · · · ·	1
Features of computerized whirlpools	2
Installation	3-5
Operation of water and electrical parts	6
Wiring and operation of computer	7
Operation of computer control	8
Caution · · · · 1	.1
Maintenance 1	12
Troubleshooting 1	.3


Features massage bathtub

1. Model, specification and function





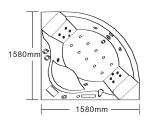

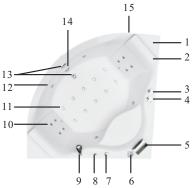

- 1.Bathtub
- 2.Pillow
- 3. Water temp adjustor
- 4. Faucet & Shower switch
- 5. Waterfall faucet
- 6.3-Way shifter
- 7.Air adjustor

- 8.Computer control
- 9.Flexible shower
- 10.Back nozzle
- 11.Air nozzle
- 12.Water nozzle
- 13. Overflower and Drainer
- 14.Bottom lamp
- 15.Apron

2. Technical paremeters.

		Power Supply Parameters				Water Supply Parameters		Diameter of the Pipe Joint		Lana distance		
p	Power sunnly	ower supply voltage	Voltage of the control		Power		Water supply	Working	Water flow	Cool&Hot		Long-distance control system
	voltage				ging Hantar Massaging p	pressure	ressure Pressure	volume	Water Supply	Drainage		
	AC220V -240V	50- 60HZ	DC12V	1.1KW	1.5- 2KW	0.25KW	≥0.2MPa	0.2~0.4MPa	8~10L/min	Ф 25	ф40	(Option)

Caution

Don't disconnect the appliance with wet hands;

Don't use or stop the use if the appliance is damaged, especially the supply cord and the case;

Parts containing live parts, except parts supplied with safety extra-low voltage not exceeding 12V, must be inaccessible to a person in the bath;

Earthed appliances must be permanently connected to fixed wiring;

Parts incorporating electrical components, except remote control devices, must be located or fixed so that they cannot fall into the bath;

The appliance should be supplied through a residual current device (RCD) having a ratedresidual operating current not exceeding 30mA;

The built-in battery contains substances which may be harmful to the environment. When you discard your remote controller in due course, please remove the battery and hand it in separately at an officially assigned collection point.


- (3). Volume set: Under radio on mode, the system enter into parameter set mode and LCD display db (see ☑), touch the key < or the key ▷ to adjust the radio volume.

 F.Bluetooth Music Playing Function
- 1. Bluetooth music playing function on: when the system on and also connects Bluetooth function, touch ① can switch radio function into Bluetooth music playing function. Retouch the key will turn off Bluetooth or radio function.
- 2. Skipping music: touch (1) can skip music, it will show "bt", then choose music by turning + or -.
- 3. Volume regulation: when Bluetooth in general state, touch \bigcirc can get into regulation state, the volume ranges from $0\sim15$, control panel shows \bigcirc when regulating.
- 4. Turn on Bluetooth music playing function, if disconnect with mobile phone, the control panel will show error code "E6".
- 5. If system off, the Bluetooth function will be off automatically. Turn on system again requires reconnect Bluetooth via mobile phone, meanwhile turn on music playing function of mobile phone, the system can get into Bluetooth music playing function. After connection we can control the Bluetooth function.

Appurtenance: Aprons installation

• Follow diagram 5 to insert aprons into pontes crevice between stretch board and tub edge (notice: properly incline apron to ensure insert go fluently)


Aprons installation

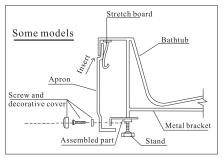



- Regulate aprons installation location, with locknuts to tighten aprons to fastener, cover fastener with decorative nuts.
- Put tub on prepared location, insert drainpipe into prepared waterspout, notice: keep inlet depth less than 10cm(if water spout faraway from location, you can lengthen the hose with same diametral hose, but please ensure kerf with plastic sealed against any leakage.)
- Reinstall the apron according to the above procedures in an inverse turn.

Installation



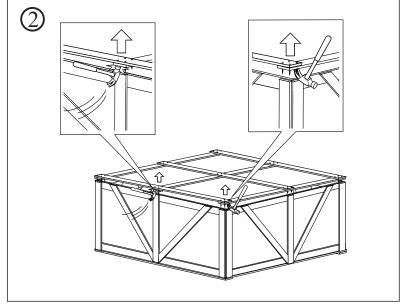

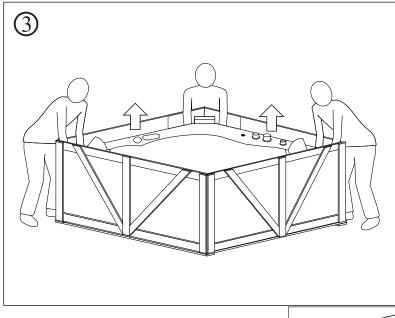

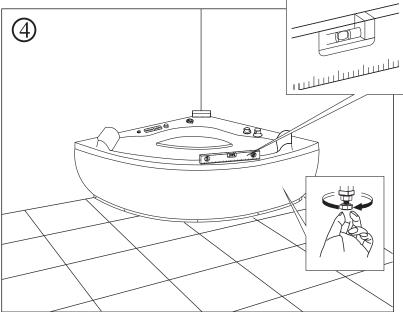

- 2. Operation of keys
- A. Power on/off
- 1). Standby: When system shuts off and under standby mode, the infrared indicator lamp is on.
- 2). Power on: Under standby mode, press touch the key for 1.5 seconds, the infrared indicator lamp lit. Touch the key ① in 10 seconds to turn on power and indicator lamp is lit, LCD displays current bathtub temperature, and the default power off time is 1 hour. Under the power on mode, if there is no activation on any function key ①, the indicator light shuts off and system enter into standby mode. In the duration of lit indicator light, touch power on/off key ② to turn on or shut power.
- 3). Power off: Under the power on model, touch power on/off key 😈 to shut all functions and indicator lamp lit for postponed 10 seconds. In the duration of the postponed 10 seconds, you can touch power on/off key 🐧 to turn on power again.
- B. Water pump/Bottom lamp/O3 disinfection
 - 1). Under the power on mode:

Before water pump turns on, as the water is above standard water level, touch the key, the key is lit and both water pump and bottom lamp is on; If the water is inadequate, the key flashes and both water pump and bottom lamp can't be turned on, while water reach standard level, the key lit and stop flash, the water pump and bottom lamp started.

- 2). The key is ok during the operation of water pump and water is adequate, press touch the key for 1.5 second to turn on O₂ disinfection and the key flashed until O₂ disinfection shuts in 15 minutes . after O₂ disinfection shuts, the key restore to lit mode and flashes once water is inadequate.
- 3).Under O_i disinfection mode, it water is inadequate, the O_i disinfection shut and will restore disinfection as water is adequate;
- 4).Under O₂ disinfection mode, press touch the key for 1.5 minutes to shut O₂ disinfection, the key 🖫 lit while water is adequate.

C . Air blower:

Under the power on mode: Press the key while water is inadequate to start dry blower, the operation will shuts in 10 minutes; Press the key while water is adequate to start air blower and no time limit to be set; During operation of air blower, the key flashes while water is inadequate and the air blower stop operation, and air blower will restore operation while water is adequate and the key lit.


D. Heater

While the water pump is on, touch the key \subseteq to start heating and LCD displayed the default temperature is 38C. while the Temp figure flashing (see or bound to get choice heating temperature; The heater is on while water is adequate, while water is inadequate and the key flashes, the heater shuts.


E. Parameter +/ -

(1). Heating temperature set: Under heating temperature set mode, LCD displayed TEMP flashed (see \blacksquare) and show the current default temperature, press the key or the key \triangleleft or the key \triangleright to set heating temperature, the temperature is adjustable from 35 C to 43 C.

Structure of safe backwater

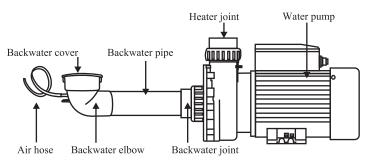

Operation of computer control panel H103

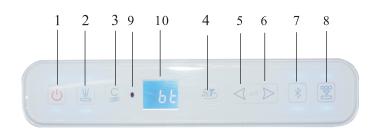

1. Power on/off

6. Parameter +

2. Water pump/Bottom lamp/ 7. Bluetooth/

O₃ disinfection

8. Air pump key

3. Heater


9. Standby indicator lights

4. Parameter set

10. LCD

5. Parameter -


- 1. Warning
- (1). The control panel is of touch sensor, please keep the panel assembled against direct spray or watering in case of abnormal operation of panel or system locked;
- (2). Please touch press keys point to activate the relative functions;
- (3). The panel is characteristic of spray-proof, when system detected malfunctioned, the instant touch is response no function and system locked, in the case of this symptom, please stop touch a moment when the panel restore activation and you can restart the functions.

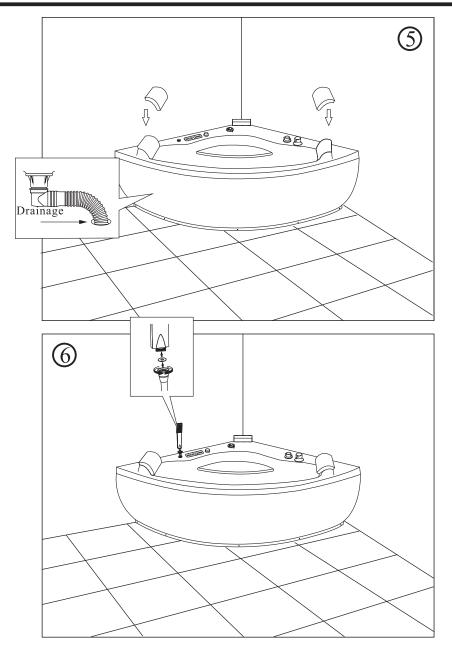

Operation of water and electrical parts

Operation of variety flow valve

Turn on the general valve of water supply, pull up the wrench valve to make the water overflow and turn it to adjust the water temperature. when the water temperature is steady, turn the shift valve to select function according to your desire

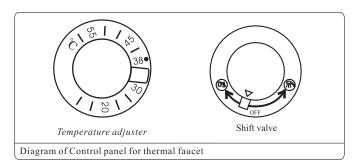



Water connection

- ➤ Connect the top shower from variety flow valve(caution the marks on the pipe end), then take the aluminium alloy board into bathroom, connect all functions refer to the marks on the pipe end.
- ➤ Connect the hot&cool water supply hose to indoor prepared tie-in, caution which is hot water or cool water.

Notice: To cut off the water supply easily after finishing your bath anytime, please place a general water valve between the supply outlet and bathroom inlet on a easy-operated place.

Wiring and operation of computer

Wiring of power box

